

English User Manual of TASSLOCK PRO Magic




Operation and Use:

1. Double Mode (Alarm Mode / Silent Mode)


Press the lock button  that is the alarm mode.


Press and hold the lock button that is the silent mode.

2. Host is with the function of battery alarm, if the power line was cut, the host will start the battery alarm mode.

3. Press the lock button , will alarm one time, turn signal will flash one time, enter lock mode. If the ignition lock was on, press

this button, the horn and controller will scream 5 times to remind you turn off the ignition lock and pull out the key.


4. Press and hold the lock button , will enter Silent Mode, the alarm horn will silence, turn signal will flash one time, enter lock mode. Other conditions are the same as the 3. This mode fit for the vehicles were driven indoors at night.


5. Press the unlock button : Enter unlock mode with voice, the alarm will scream 2 times, turn signal will flash 2 times.


6. Press and hold the unlock button , will enter unlock mode without voice, the alarm will not scream, turn signal will flash 2 times.

7.  Unlock button:


(1)Enter driving mode: Turn on the ignition lock, press the unlock

button  one time, then you can use the start button, otherwise motor will be idled.



(2) Remote Controller Start Mode: When the ignition lock is off and the alarm is in the status of unlocking, quick press the unlock button  two time, the vehicle will start.(This alarm is for Positive output starting, negative starting cannot work, just can use the remote controller to start the ignition)



9. **Test for Remote control Battery:** Press and hold the unlock button  more than two seconds then release, low battery indicator will flash, flash time is the less battery, for example, if it flash 5 time, it means power enough, flash 1 time, means battery will run out, please change the battery.



10. **Low Battery Indication:** When the low battery indicator flashes, the vehicle will send out warning tone"DI". It means the battery of the controller will run out, please change the battery, in order to avoid the vehicle cannot be started in halfway.



11. **Effective Range of Two Way Alarm:** Press the Lock button , the locking indicator (Red) will flash one time, it means the position you stay is effective, if the indicator flash after long time or not flash, it means the position you stay is ineffective.



User Personalization (Use After open the ignition lock)



1. **Turn On Turning Tone:** Press and hold  and after press  3 time, then release two button, finished after turn signal flash 3 time.



2. **Turn Off Turning Tone:** Press and hold  and after press  4 time, then release two button, finished after turn signal flash 4 time.



3. **Turn On After 3 Minute Parking Auto-lock:** Press and hold  and after press  5 time, then release two button, finished after turn signal flash 5 time.



4. **Turn Off After 3 Minute Parking Auto-lock:** Press and hold  and after press  6 time, then release two button, finished after turn signal flash 6 time.


5. **Turn on Built-in Lock:** Press and hold  and after press  7 time, then release two button, finished after turn signal flash 7 time.


6. **Turn off Built-in Lock:** Press and hold  and after press  8 time, then release two button, finished after turn signal flash 8 time.


7. **Alarm Mode Sensitivity Setting: Turn on ignition lock,** Press and hold  and press , enter 5 Level sensitivity setting (press one time that is 1 Level and horn will “DI” one time, press two time that is 2 Level and horn will “DI” two time.....and so on, Up to 5 Level, the default is 3 Level)


8. **Full Manual & Remote Silent Option:** Turn on the Bike key, Now Press and hold  Button and press  12 times. And release both buttons. Now you can see Indicator light will flash 12 times.

9. **Factory Reset Setting** (Factory Default: Turning Tone ON, Auto-lock After 3 minute ON, Built-in Lock ON): Press and hold  and after press  15 time, then release two button, finished after the host ring on.

10. Hazard Light On: Press and hold  button for 4/5 seconds, there will be a sound and hazard lights on.

11. Hazard Lights Of: Just press  button once to shut down hazard light.

12. Remote vibration mode: Press and hold  5 seconds for activate.

13. Remote vibration mode off: Press and hold  for 5 seconds for activate default mode.

14. PKE (Passive keyless Entry) Range control: Turn on bike, Press and hold  and press  21 times = 1 meter.

22 times = 2 meters

23 times 3 meters

24 times = 4 meters

25 times = 5 meters.



Common Faults & Solution

Try to Reset the Remote first.

Faults	Cause and Solution
No respond after press the button of controller	Low battery or the controller broken
Host without respond after turn signal flash	Alarm horn wire cut or broken
After start the ignition lock and with right respond after press the button of controller, the vehicle cannot start	1.Low battery on vehicle or battery wire poor contact. 2.Solution of the situation Low battery on vehicle or battery wire poor contact: Start the ignition lock, press the unlock button and ring unlock tone, but do not press the start button, shift downhill directly traction to start the engine.
Vehicle Cannot start	1.Check the battery 2.Check the ignition lock, start ignition lock, check whether the turn signal and indicator of meter is normal, if it is normal, please check whether the ignition lock is broken or battery fuse is short circuit.

Note:

1. If you cannot solve the above faults with the solutions, please contact the supplier.
2. **DO NOT LINK** the controller and the your own key together, otherwise it may damage the circuit inside the remote control