

Tasslock Defender LED User Manual

TASSLOCK LED REMOTE SENSOR

















Tasslock Defender LED

User Manual












Remember without the ignition confirmation sound the motorcycle will not start.

Auto and manual unlock













1. After turning off the engine Motorcycle will be locked automatically once the remote moves away 5 meters plus distance. Motorbike indicator will flash once for confirmation.
2. Motorcycles will be automatically unlocked when the main remote comes in the 5 meters range.
3. To unlock manually press  1 time. The notification will sound and indicators will flash twice.
4. To lock manually press  1 time. The notification will sound and indicators will flash once.
5. To activate the silent lock mode press and hold  for 2 seconds. Indicators will flash once and the motorcycle will be locked in silent mode.
6. To activate the silent unlock mode press and hold  for 2 seconds. Indicators will flash twice and the motorcycle will be unlocked in silent mode.
7. In case of no confirmation sound after key in press  once.
8. To activate PKE (Passive Keyless Entry) Mode press  twice. Motorbike ignition will turn on with confirmation sound.
9. In case of any unwanted or threatening situation press  and run away. The engine will be immobilized and will not start.
10. To turn off the engine silently press and hold  for 2 seconds.
11. Built in LED indicator will show lock status. If it blinks Red it means the motorcycle is locked. If Blue it means unlocked.
12. To locate your motorcycle from a distance press . The indicators will flash and notification will sound 5 times.
13. The device will automatically be armed once the ignition is turned off. Moving away for 5 meters will immobilize the engine.
14. Press and hold  for 3 seconds to check the main remote battery level. The blinker will flash according to battery level. 6 times means full charge, 1 time means low battery.
15. After pressing  or  if there is no light blinking it means the remote is out of range. But the motorcycle is still immobilized.
16. While using backup remote to start the motorcycle must press  to activate the ignition.
17. In case of any unwanted or threatening situation press  and run away. The engine will be immobilized and will not start. A 125 dB alarm will be triggered.

Tasslock Defender LED

User Manual





18. While riding in PKE mode press  to turn off the engine.
19. If robbers snatch motorcycle while driving in PKE mode press  once. The engine will be immobilized and a 125 dB alarm will be triggered.
20. To change the vibration sensitivity mode press and hold  and then press  3 times and release both buttons. Notification will sound 3 times. It means now the motorcycle vibration sensitivity level is set to level 3. Same way you can choose between level 1 and level 5.
21. To activate remote silent mode press and hold  for 5 seconds. The remote will vibrate confirming the silent mode. To deactivate press and hold  for 5 seconds. The remote will sound alarm confirming the deactivation.
22. To change auto unlock range press and hold  and then press  21 times for 1 meter, 22 times for 2 meters, 23 times for 3 meters, 24 times for 4 meters and 25 times for 5 meters.
23. To turn on hazard warning light press  then press and hold  until the notification sound. To turn off press  once.

Some important features. (Motorbike ignition should be turned on)

1. Turning on Indicator notification: Press and hold  and then press  3 times, then release both. Indicator light will flash 3 times for confirmation.
2. Turning off Indicator notification: Press and hold  and then press  4 times, then release both. Indicator light will flash 4 times for confirmation.
3. Turning on parking lock: Press and hold  and then press  5 times, then release both. Indicator light will flash 5 times for confirmation.
4. Turning off parking lock: Press and hold  and then press  6 times, then release both. Indicator light will flash 6 times for confirmation.
5. Turning on Builtin lock: Press and hold  and then press  7 times, then release both. Indicator light will flash 7 times for confirmation.
6. Turning off Builtin lock: Press and hold  and then press  8 times, then release both. Indicator light will flash 8 times for confirmation.

Tasslock Defender LED

User Manual

7. Turning off Auto remote: Press and hold  and then press  12 times, then release both. Indicator light will flash 12 times for confirmation.
8. Factory Reset: Press and hold  and then press  15 times, then release both. Motorcycle will sound a confirmation tone on factory reset.

Common Faults and Solutions

Note: If you cannot solve the above faults with the solutions given. Then contact the Helpline 01715593468 or Contact the Supplier. Try Resetting the Remote first.

DO NOT OPEN THE DEVICE OR REMOTE. IT WILL VOID YOUR WARRANTY.

WWW.TASSLOCK.COM

All Rights Reserved

Fault	Cause and Solution
No response after button press	Low battery or remote broken
Host without response after turn signal flash	Alarm horn wire cut or broken
After start the ignition lock and with right respond after press the button of controller, the vehicle cannot start	1. Low battery on vehicle or battery wire poor contact. 2. Solution of the situation Low battery on vehicle or battery wire poor contact: Start the ignition lock, press the unlock button and ring unlock tone, but do not press the start button, shift downhill directly traction to start the engine
Vehicle Cannot start	1. Check the battery. 2. Check the ignition lock, start ignition lock, check whether the turn signal and indicator of meter is normal, if it is normal, please check whether the ignition lock is broken or battery fuse is short circuit